

Storage

This chapter explains Storage and how to set it up..

Contents

1. Plantview Storage overview	1
2. Setup Plantview Storage.....	2


Use Plantview Administration

1. Plantview Storage overview

Storage is disk space that belongs and is fully administered by the user.

Storage is used to

- Archive and Backup your data
- Sync data between workstations
- Sync data to plantview.cloud (minimized data transfer)

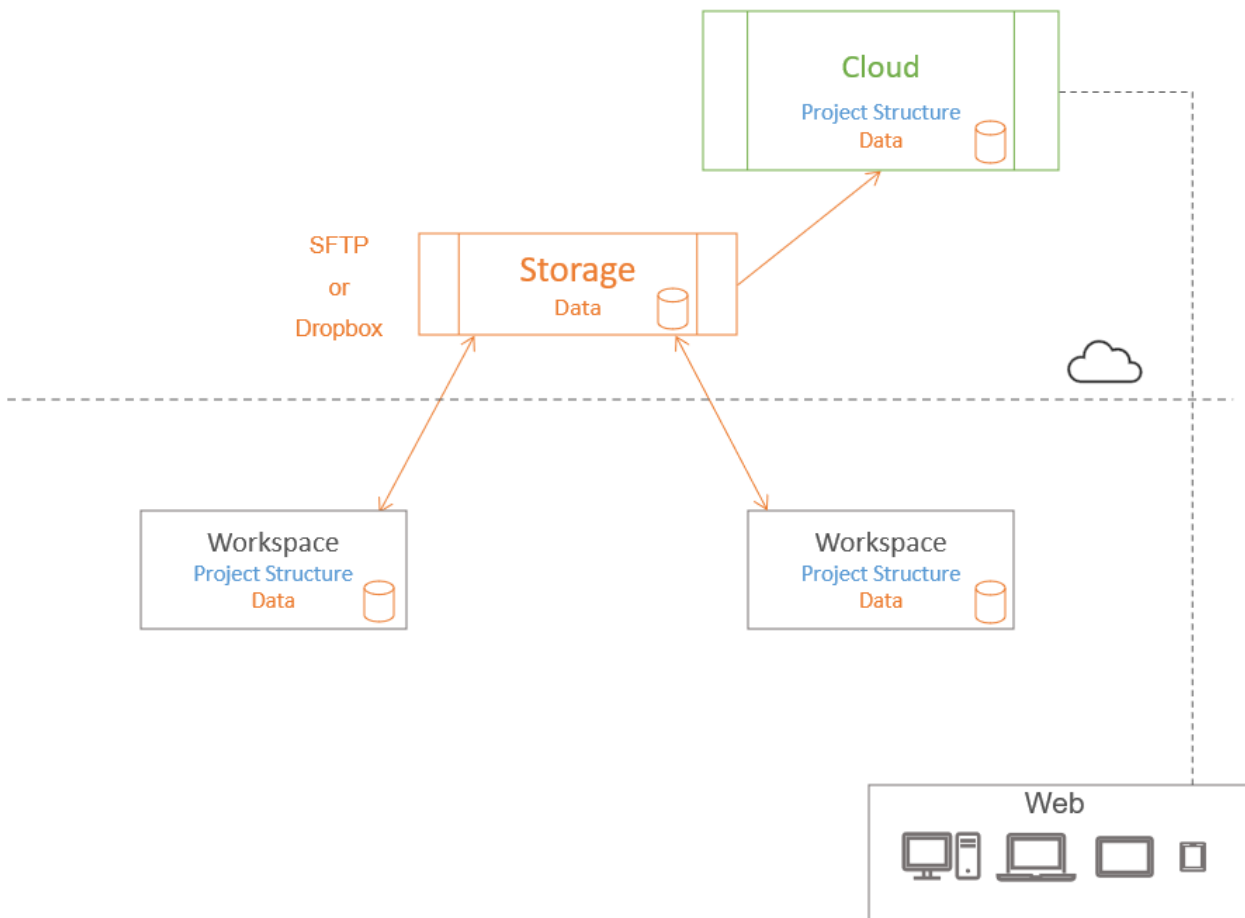


2. Setup Plantview Storage

In order to use Plantview Storage you need to first set it up in the Administration section.

Go to Menu/**Administration** to enter the Administration section.

You can also access Plantview Administration by directly visiting www.plantview.de.

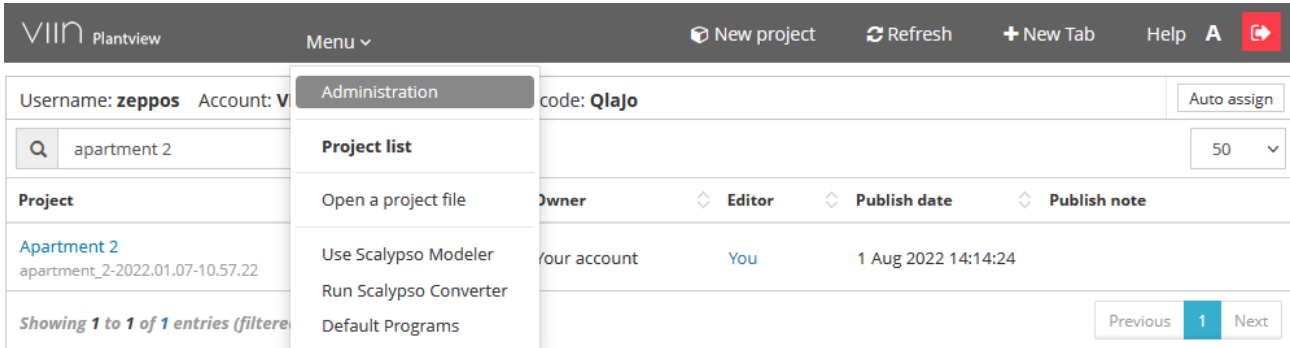

Press Storage/**Set up**

Enter all the necessary fields to connect your personal storage space, save, and verify by pressing Connect.

